Before using the dishwasher, read the user instructions!

ADP 532 Quick Reference Guide

GB

Programme selector knob

On/Off button

Programme chart				Detergent [2]		Consumption [3]		
Programmes			Loading instructions	B	C	Litres	kWh	Minutes
	Pre-Rinse	**cold**	Crockery to be washed later.	-	-	5.0	-	10
	Normal	**50°C**	Normally soiled crockery.	X	X	22.0	1.38	90
eco	**Eco** [1]	**50°C**	Lightly soiled crockery, with no dried-on food.	X	-	17.0	1.24	80

1) Reference programme for energy label in compliance with EN 50242 regulations;

2) Refer to "User instructions";

3) Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.

Whirlpool is a registered trademark of Whirlpool USA

5019 396 93004
(We reserve the right to make technical modifications)

How to use the appliance

Further indications are given in the single chapters and in the user instructions.

Open the door

How to fill the detergent dispenser

To open compartment press **A**.
Large compartment **B**:
With each wash cycle.
Small compartment **C:**
For programmes with pre-wash only.

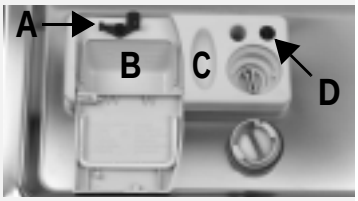

Check the rinse aid level

Mechanical indicator **D**.
Electric indicator on control panel (if provided).

Check the regeneration salt level

On models with water softener system only.
Mechanical indicator **E**. Electric indicator on control panel (if provided).

Load the racks

Refer to the dishwasher loading instructions.

Close the dishwasher door, turn on the water tap

Select a programme

Select the desired programme by turning the selector knob clockwise.

Select options

If necessary (and if provided).

Press the On/Off button to start the programme

"Change programme"
- Press the On/Off button, the On/Off indicator lamp switches off;
- Select another programme and press the On/Off button again. The On/Off indicator lamp switches on.

Wash cycle

- Only open the dishwasher if necessary (Warning: beware of hot steam).

Switch off the appliance

Press the On/Off button.

Turn off the water tap, unload the racks

Warning: when the door is opened steam comes out!
Unload the appliance, starting from the lower rack.

Dishwasher loading instructions and racks provided

Upper rack: **depending on the model**

Crockery holders (A) depending on the model:

Long-handles utensils, cups and glasses.

Glasses should rest against side of basket or holders.

Tall, narrow items should be placed in the middle of the rack or on the holders.

When more space is needed, holders can be tilted against rack side.

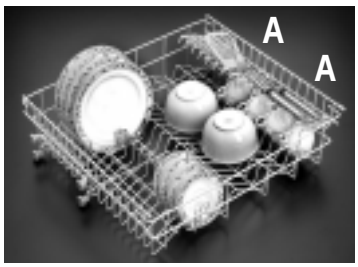

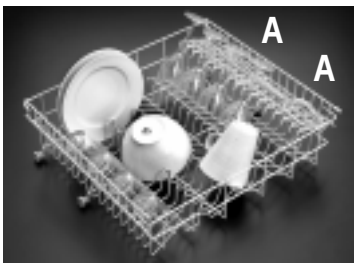

Rack height adjustment (factory setting upper position):

- The rack must be level on both sides.

Lower rack:

Tilting plate holders (4 seperately tiltable holders) (**F**) depending on the model.

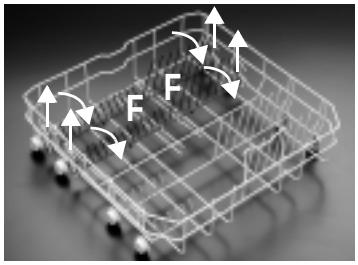

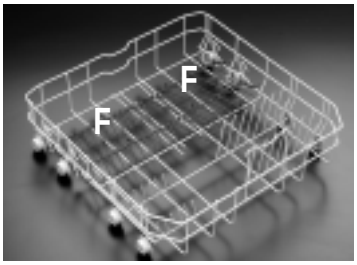

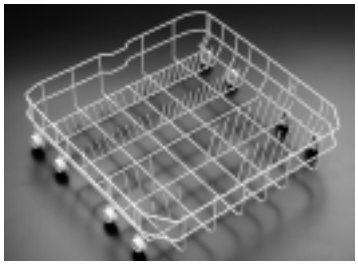

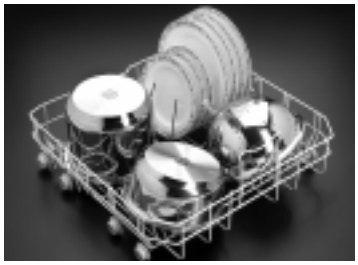

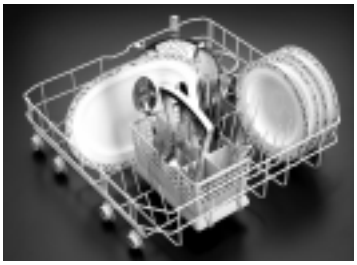

Cutlery basket (G):

Sharp knives and forks that might cause injury must be placed in the cutlery basket with the handles positioned upwards.
Some models are provided with a grid that can be fitted onto the cutlery basket to keep items separated.

Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.

What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy
The appliance is not working	• No water supply.	• Open the tap.
	• The appliance does not load sufficient water.	• Clean the water supply tap filter. • Ensure there are no kinks in the water hose.
	• There is a power failure.	• Insert the plug into the mains socket. • Press the On/Off button. • Close the door. • Check the domestic circuit fuse.
	• Starting the selected programme.	• Press the On/Off button.
If crockery is not perfectly dry	• Insufficient rinse aid.	• Increase dosage *.
	• Residual water in cavities.	• Load crockery at an angle.
If crockery is not perfectly clean	• The water jet does not reach the crockery.	• Arrange crockery so that items do not touch each other. Load crockery upside down.
	• Insufficient detergent.	• Follow recommended detergent dosage.
	• Unsuitable programme.	• Select a more intense wash cycle.
	• Spray arms blocked.	• The spray arms must be able to turn freely.
	• Spray arm nozzles clogged.	• Remove any impurities obstructing the water flow *.
	• Incorrect detergent/detergent too old.	• Use a good quality detergent.
Sandy or grainy residues	• Clogged filters.	• Check filters regularly/if necessary clean *.
	• Filters incorrectly assembled.	• Insert the filter correctly *.
Colour of plastic parts faded	• Tomato/carrot juice,...	• Depending on the material, if necessary use a detergent with a greater whitening power.
Deposits on crockery		
• removable	• Streaks on the crockery/glasses.	• Increase the rinse aid dosage *.
	• Streaks on glasses.	• Reduce the rinse aid dosage
	• Layer of salt on crockery/glasses.	• Close the salt container lid properly *.
• not removable	• Insufficient water softening, calcium deposits.	• Change water hardness setting, if necessary add salt *.
Opaque glasses/ glasses not sparkling	• Cannot be washed in the dishwasher.	• Use suitable glasses.
Rust on cutlery	• Not made of stainless steel.	• Use suitable cutlery.

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault.
- The appliance type and model.
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.